

## **GRAIFARE ROTATIVE**

<p><b>HSH-7.94B</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>                      Brother DB2,B753,B714,B736                      Juki DDL-127,227,541,555,5550                      Singer 281,81,83,366,400,600W                      Mitsubishi DB-126-10, 130G-10,171                      Toyota                      AD148,156,388,D146M,352                      China GC15-1,GC28-1,GC30-12</p>		<p><b>HSH-7.94A</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>                      Brother DB2-B706-5, B755-5                      Janome DB-J705,706                      Mitsubishi DB130-12,13, DY-340-12                      Singer                      241,251,281,391U,402W,451K                      Erder KD-8100-5,7                      Nitaka TC-1553,1555</p>	
<p><b>HSH-7.94A (MTQ)</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>                      TAJIMA TME,TMEF,TMLE                      BUTTERFLY GY4-1                      TYPICAL GYD20-6                      YING LUN GY101-1</p>		<p><b>HSH-7.94ATR (MTQ)</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>                      TAJIMA TMBE,TME,TME-D,                      TME0DC,TMEF,TMEG-X,XC,                      TMFD-C, TMFX-C,TMLR,                      TMLG,TMEX-C901</p>	
<p><b>HSH-7.94BTR</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>                      Janome DB-J709                      Juki DDL-500, DLD-432-2,                      DMN-530                      Toyota AD157-623, 666,                      AD157A-622                      Consew 290RATCW, 290RTC,                      290TRCW                      China GC34, GC6-1-D3</p>		<p><b>HSH-A1(AISH)</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>                      BROTHER DB2-B745-7, B797-5                      TAJIMA TMB-E, TMB-W,                      TMW                      JUKI DDL-201S                      YAKUMO DBU-175L-3                      CHINA GC6-7</p>	

<p><b>DB1-Z16B</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>          BROTHER TZ1-B651, B652,          BAS-400, LES-B861-7          I-SIAN IS-335          KING'S HC-335          MILLION SPECIAL MS-335          TAKING TK-652          WOEI RONG WR-335          YULUN YLM-335</p>		<p><b>DP2-NJ</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>          JUKI LBH-761, 762, 763          DALIAN G13          HUANAN(SOUTH CHINA)          G16-1          SHANGGONG G15\          SUNGOOD GF11001</p>	
<p><b>DP2-NJ771</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>          JUKI LBH-771~774, 781~784          K-CHANGE KBH-890          TAKING TK-888          DALIAN G18</p>		<p><b>DP2-LB</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>          BROTHER LH4-B814-          2,3,4,102</p>	
<p><b>DP2</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>          PEGASUS DPS-2,3,150          YAMATO DP2,3          SINGER          107G,107W1,107W5,17          ADLER 91,98          DURKOPP 252,253,254,255,264          SUNSTAR DPK-2</p>		<p><b>DP2-815</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>          BROTHER LH4-B815</p>	
<p><b>DP2-57(2)</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>          BROTHER LZ1-B852          MITSUBISHI LZ-710-11, 720-11,          760-11, 780-11, 790-11          SINGER          457G1,5,41,45,103~445, 457U,          457GX2,3~26,~445          CONSEW 347-1,2,3,4          YULUN 547U205,225</p>		<p><b>DP2-57(2LP)</b></p> <p><b>Utilizat la urmatoarele tipuri de masini:</b>          SINGER 457G          YULUN 547U435L</p>	

<p><b>HSH-8-20</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>SINGER 61W, 108K          DURKOPP 460</p>		<p><b>HPF-490(A)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>PFAFF 471~493,(L)          SEIKO PWB-8GW</p>	
<p><b>HPF-490(5)TR</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>UNICORN LT5-HP331AT, LT5-HP333AT          SEIKO PWB-8GW, 8GWC-FL, LC</p>		<p><b>HPF-490</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>PFAFF 471~493</p>	
<p><b>HSH-21-40(J)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>JUKI LB-512,515          SINGER 211G146,151, 157,158,166~266,          211GX110,115,212G140,          141,145,212W140,146,212U141          SHANGGONG GC15-4-4D,          GD8-1,2</p>		<p><b>HSH-21-40(AJ)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>JUKI LH-515H,512H</p>	
<p><b>HSH-31</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>YAKUMO 981,982          SINGER 21W180,46W61,          47W62,63,52W30,31,153K100~102          CONSEW 228,228-11,228R-1,229,229R,229R-1,238,238R-1</p>		<p><b>HSH-31-(6)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>YAKUMO 981,982          GOLDEN WHEEL CS-810,820          NITAKA TC-810S,820S          SUNSTAR KM-867, KPW-827B</p>	

<p><b>HSH-12-15MM</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>MITSUBISHI DN260-22,262,265-22,267</p>		<p><b>HSH-12-15MM(V)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>MITSUBISHI DU-100-22,102,105-22,107,120-22,122,125-22,127, LU2-400-BOB,420-BOB</p>	
<p><b>HSH-12-15LC</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>BROTHER LT2-B835-3,5,800 SEIKO LTW-27BK CONSEW 327R-1</p>		<p><b>HG12-15LC</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>BROTHER LT2-B845</p>	
<p><b>HG12-15L(TRI)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>BROTHER LT2-842</p>		<p><b>HSH-12C</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>MITSUBISHI DN-275-10,10K</p>	
<p><b>HSH-12-15MM</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>MITSUBISHI DB-286,286-10, DN-260,260-7,260-10, DN-265,265-10, LT2-220-MOB</p>		<p><b>HSH-12-62C(L).(R)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>JUKI LH-1162 SICAMA(TASICO)SC-1162-5 SHANGGONG GD8-4,5</p>	
<p><b>HSH-12M-82C(L).(R)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>JUKI LH-1182 SICAMA(TASICO) SC-1182-5 SHANGGONG GD8-6,7</p>		<p><b>HSH-11-55</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>JUKI LU-53,55,562 SINGER 111W155,156,211G 155,156,211U165 .166,211U365/6,211W151 CONSEW 137,139R-1,224R-1,225VMG,226RVM-1</p>	

<p><b>HSH-12(2)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>JUKI LH-1152            SUNGOOD GC0501</p>		<p><b>HSH-12-15(2)TR</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>JUKI LH-1152-4,5</p>	
<p><b>HSH-12-15MM(5)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>BROTHER LS2B837            SEIKO LLW-7L,7BL,8L,8BL,LSW-6L,7L,7L-TA,8BL-TA            TOYOTA AD331L,331LP,332L,332LP            CONSEW 333B,333RB-1,339RB-1,333RBL-1</p>		<p><b>HSH-12-15MMB(5)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>BROTHER LT2-838            SEIKO LLW-27L,27BL,28,28L,28BL,LSW-27L,27BL,27BLM,28L,28BL,LTW-27BLM            CONSEW 333B,333RB-1,339,RB-1,333RBL-1</p>	
<p><b>HG12MC(1)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>BROTHER LT2-B875</p>		<p><b>HG12M(BR)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>BROTHER LT2-B872</p>	
<p><b>HSH-12-15MMJ</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>JUKI LU-563</p>		<p><b>HSH-12-15MMJ(A)</b></p> <p>Utilizat la urmatoarele tipuri de masini:</p> <p>JUKI LU-563-3, LUH-520            YAKUMO 481L,482L            SINGER 12U539A,839A,211U567A,867A,1U867            EAGLE EA-156RB            GOLDEN WHEEL CS-3L-7241,7243</p>	